


# Diversitrack Mechanical Hand Brake

With roller in hand, slip the u-bolt over the end of the roller shaft and slide down. Assemble the Brake Kit as shown.

Existing Systems:  
Unfasten and remove roller from a lower corner you have targeted for the brake placement. Removal of interactive board is not necessary.

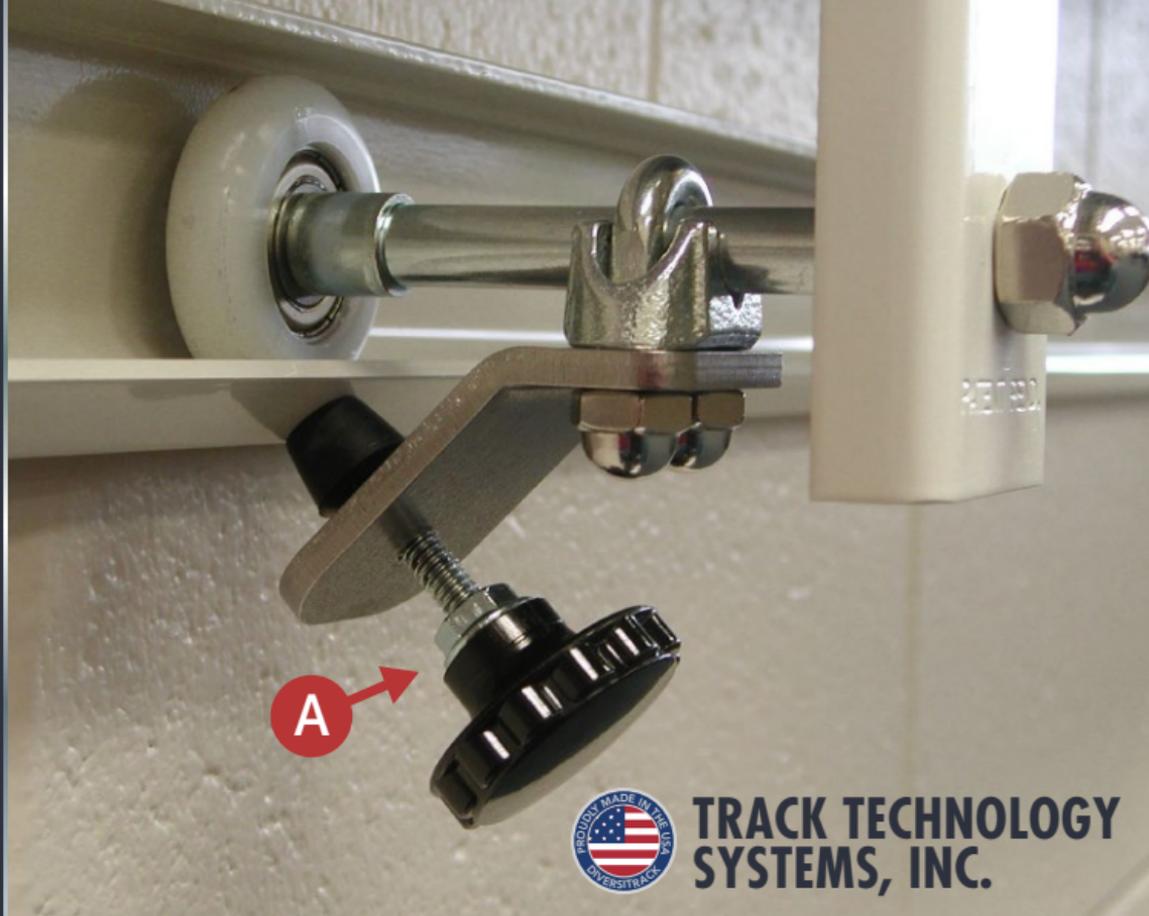

**TRACK TECHNOLOGY  
SYSTEMS, INC.**

A - Be sure to firmly tighten jamb nut.